



HOW TO GUIDE

# MEASURING YOUR CURTAINS

Get a greater understanding of what measurements are required and how to take them.

## HERE'S WHAT YOU'LL NEED

- ✓ Tape measure or Laser Measuring Device
- ✓ Notepad & pen/pencil
- ✓ Ladder (if required for larger windows)

## STEP 1

# CURTAIN TRACK LOCATION

CHOOSE YOUR CURTAIN TRACK MOUNTING POSITION

### TOP FIX

Mounting brackets direct to the ceiling.

### FACE FIX

Mounting brackets direct to the wall.

Common Options:

- 150 mm above the window's top architrave.

Please consider when choosing face fix that the positioning above the window, is consistent with other windows that may be located in the same space.

TOP FIX  
FACE FIX




## STEP 2

# CURTAIN SPAN

CHOOSE YOUR WINDOW COVERAGE

150mm either side of window's architrave or wall to wall finish.

Please consider when measuring, that your curtains when open, will approximately stack back 30% of the total width. If curtains require to stack back off the windows, allow for additional in the overall measurement.

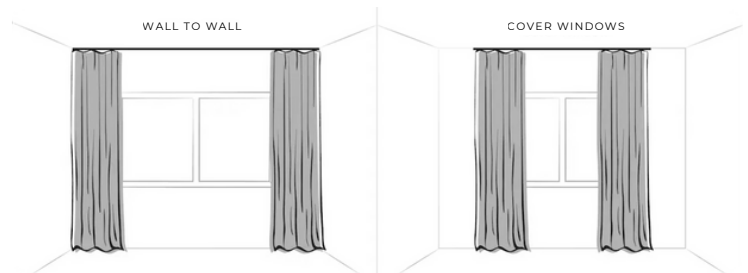

## STEP 3

# MEASURING

### TOP FIX

- Measure from ceiling to finished floor.
- Measure width from left to right, based on the window coverage.

### FACE FIX

- Measure drop from curtain track mounting position height to finished floor.
- Measure width from left to right, based on the window coverage.

Please consider when measuring the drop, that the measurement provided includes the desired curtain finish on the floor.

Common options:

- 10mm above finished floor (deducted 10mm from drop measurement).
- Kissing (just touching finished floor – no deductions required from drop measurement).
- Puddling (10-20mm on the floor, ideal for 100% linen curtains, add additional length to drop measurement).

\*\*\*Please note that the measurements should be taken in three (3) different points; left side, middle & right side

WIDTH

DROP

